

BUYOUNGER LAMINATOR

Professional Grade Laminating Machine

Model Series: BYL-2024

Note: This manual was downloaded from <https://buyounger.org/>

1. SAFETY INSTRUCTIONS

WARNING: Read all safety instructions before operating this laminator. Failure to follow these instructions may result in injury or equipment damage.

- Always unplug the laminator when not in use
- Do not touch the heated rollers during operation
- Keep hands and loose clothing away from the feed opening
- Do not laminate items containing metal staples or clips
- Use only recommended laminating pouches
- Allow unit to cool completely before cleaning or storing
- Do not operate near water or in humid environments
- Ensure proper ventilation around the unit during operation

2. PRODUCT SPECIFICATIONS

Specification	Details
Maximum Laminating Width	9 inches (A4 size)
Warm-up Time	3-5 minutes
Laminating Speed	12 inches per minute
Temperature Range	80°C - 160°C (176°F - 320°F)
Pouch Thickness	3 mil to 10 mil
Power Consumption	300W
Dimensions	15" x 6" x 4" (L x W x H)
Weight	4.5 lbs
Power Supply	110-120V AC, 60Hz

3. PACKAGE CONTENTS

- Buyounger Laminator Unit
- Power Cord
- User Manual

- Sample Laminating Pouches (10 pieces)
- Cleaning Sheet
- Warranty Card

4. INITIAL SETUP

4.1 Unpacking

1. Remove the laminator from the packaging carefully
2. Check that all components listed above are included
3. Remove any protective tape or materials from the unit
4. Place the laminator on a flat, stable surface with adequate ventilation

4.2 First Time Setup

1. Connect the power cord to the laminator
2. Plug the power cord into a standard electrical outlet
3. Press the power button to turn on the unit
4. Allow the laminator to warm up for 3-5 minutes before first use

5. OPERATION INSTRUCTIONS

5.1 Basic Laminating Process

1. **Step 1:** Turn on the laminator using the power switch
2. **Step 2:** Select the appropriate temperature setting based on pouch thickness
3. **Step 3:** Wait for the ready indicator light to turn green (3-5 minutes)
4. **Step 4:** Place your document in the laminating pouch, ensuring even margins
5. **Step 5:** Insert the sealed edge of the pouch into the laminator first
6. **Step 6:** Feed the pouch slowly and evenly into the machine
7. **Step 7:** Allow the laminator to pull the pouch through automatically
8. **Step 8:** Collect the finished laminated document from the output tray
9. **Step 9:** Allow the laminated item to cool before handling

5.2 Temperature Settings

- **Low (80°C):** 3 mil pouches, thin documents
- **Medium (120°C):** 5 mil pouches, standard documents
- **High (160°C):** 7-10 mil pouches, thick materials

5.3 Cold Laminating

For heat-sensitive materials, use the cold setting:

1. Set temperature to "Cold" position
2. Use self-adhesive cold laminating pouches
3. Feed document through without heating

6. MAINTENANCE AND CLEANING

6.1 Regular Cleaning

- 1. Turn off and unplug the laminator
- 2. Allow the unit to cool completely
- 3. Wipe the exterior with a damp cloth
- 4. Clean the feed opening with a soft brush
- 5. Use the included cleaning sheet monthly to clean internal rollers

6.2 Deep Cleaning

If adhesive buildup occurs on rollers:

- 1. Turn on the laminator and allow it to warm up
- 2. Run the cleaning sheet through the machine 2-3 times
- 3. Turn off and allow to cool
- 4. Wipe away any remaining residue with isopropyl alcohol

7. TROUBLESHOOTING

Problem: Laminator won't turn on
Solution: Check power connection, ensure outlet is working, verify power switch is in ON position

Problem: Document not laminating properly
Solution: Increase temperature setting, ensure proper warm-up time, check pouch compatibility

Problem: Bubbles or wrinkles in laminated document
Solution: Feed document more slowly, ensure document is flat in pouch, check for moisture

Problem: Pouch jam in machine
Solution: Turn off unit, allow to cool, carefully remove jammed material with plastic tool

Problem: Laminated document is cloudy
Solution: Increase temperature, ensure complete warm-up, use fresh laminating pouches

8. WARRANTY INFORMATION

8.1 Warranty Coverage

Buyounger provides a 2-year limited warranty on this laminator from the date of purchase. The warranty covers defects in materials and workmanship under normal use conditions.

8.2 Warranty Exclusions

- Damage due to misuse or abuse
- Normal wear and tear
- Damage from unauthorized repairs
- Use of non-recommended laminating pouches

8.3 Service Information

For warranty service or technical support:

- Email: support@buyounger.org
- Phone: 1-800-BUY-YNGR
- Website: <https://buyounger.org/support>

9. TIPS FOR BEST RESULTS

- Always use high-quality laminating pouches designed for thermal laminators
- Trim documents to leave appropriate margins for sealing
- Remove all staples, clips, and adhesive materials before laminating
- Keep laminating pouches in a cool, dry place
- Feed documents straight and centered for best results
- Allow adequate warm-up time for consistent results
- Clean the laminator regularly to maintain performance

10. ENVIRONMENTAL CONSIDERATIONS

This laminator is designed for energy efficiency and environmental responsibility. When disposing of the unit at end of life, please recycle according to local electronic waste regulations.

Buyounger Laminator Manual

Version 2.1 | © 2024 Buyounger Corporation

Downloaded from: <https://buyounger.org/>

For the latest version of this manual, visit our website